

■ CUSTOMIZED BODY ELECTRONICS SYSTEM

1. General

The customized body electronics system enables the control function settings of the ECUs to be changed through the use of a hand-held tester.

However, this system can change the settings of only the ECUs that belong to the bus in which communication is centered on the Body ECU.

2. Operation

The specifications of the systems and functions that can be changed by operating a hand-held tester.

System	Hand-Held Tester Display Content	Contents	Default	Selection
Wireless Door Lock Remote Control System	OPEN DOOR WARN	Function to make the buzzer sound for 10 seconds if the door is open when locking with the wireless door lock function.	ON	ON/OFF
	WIRELESS OPER	ON/OFF of the wireless door lock function.	ON	ON/OFF
	ALARM FUNCTION	Function to operate the theft deterrent system by keeping pressing the lock button of the transmitter for 2.5 seconds. If there is the panic button, press the panic button instead of the lock button.	ON	ON/OFF
	INT/LGT ON/UNLK	Function to light the interior light, ignition switch light and step light when unlocking with the wireless door lock function.	ON	ON/OFF
	UNLOCK/2 OPER	Function to unlock the driver's door by pressing the unlock button of the transmitter once and to unlock all the doors by pressing it twice. In the OFF setting, pressing one time makes all the doors unlocked.	ON	ON/OFF
	AUTO LOCK DELAY	To change the time until re-locking after unlocking with the wireless door lock function.	30 s	60 s/30 s
	UNLK/KEY TWICE	Function to unlock only the driver's door by doing the key operation once and to unlock all the doors by doing it twice. In the OFF setting, operating the key "UNLOCK" once makes all the doors unlocked.	ON	ON/OFF
Theft Deterrent System*1	PASSIVE MODE	PASSIVE MODE is the function to set the theft deterrent system 30 seconds later after having the driver's door closed from opening condition by removing the key from the ignition key cylinder.	OFF	ON/OFF
	WARN BY GLS SEN	Function to turn ON/OFF of the glass break sensor. This function is only effective for the vehicle with glass break sensor.	ON	ON/OFF
	WARNING (HORN)	Function to make the warning by the horn and theft deterrent horn available.	ON	ON/OFF
	ENTRY DELAY	To change the entry delay time (period before starting the warning) by the passive mode.	14 s	0 s/14 s/30 s
	INTRUSION SEN	Function to turn ON/OFF of the intrusion sensor. This function is only effective for the vehicle with intrusion sensor.	ON	ON/OFF

(Continued)

System	Hand-Held Tester Display Content	Contents	Default	Selection
Power Window System	UP/DOOR KEY	Function to make all the door windows up manually by holding the driver's side door key to the lock side for 1.5 seconds when the ignition switch is OFF.	ON	ON/OFF
	DOWN/DOOR KEY	Function to make all the door windows down manually by holding the driver's side door key to the unlock side for 1.5 seconds when the ignition switch is OFF.	ON	ON/OFF
Illuminated Entry System	LIGHTING TIME	To change the lighting time after closing the door. (It will quickly fade out in case of turning the ignition ON.)	15 s	7.5 s/15 s/ 30 s
	I/L ON/UNLOCK	Function to light up the interior light, ignition light and step light when unlocking with the door key cylinder.	ON	ON/OFF
Light Control System	LIGHT CTRL TYPE	To change the control logic when the light control switch is at AUTO position.	CURRENT	CURRENT/ OLD
	SENSITIVITY	To adjust the sensitivity of the lighting illumination.	NORMAL	LIGHT 2/ LIGHT 1/ NORMAL/ DARK 1/ DARK 2
Air Conditioning System	SET TEMP SHIFT*2	To control with the shifted temperature against the display temperature.	NORMAL	+2 C/+1 C/ NORMAL/ -1 C/-2 C
	AIR INLET MODE	In case of turning the A/C ON when you desire to make the compartment cool down quickly, this is the function to change the mode automatically to RECIRCULATED mode.	AUTO	MANUAL/ AUTO
	COMPRESSOR MODE*2	Function to turn the A/C ON automatically by pressing the AUTO button when the blower is ON and the A/C is OFF.	AUTO	MANUAL/ AUTO
	COMPRS/DEF OPER*2	Function to turn the A/C ON automatically linking with the FRONT DEF button when A/C OFF.	LINK	NORMAL/ LINK
	AUTO BLOW UP*2	Function to switch the blower level automatically when the defroster is ON.	ON	OFF/ON
	AMBIENT TMP SFT*2	To control with the shifted ambient temperature against the display ambient temperature.	NORMAL	+3 C/+2 C/ +1 C/ NORMAL/ -1 C/-2 C/-3 C

*1: Only on models with theft deterrent system.

*2: Only on models with automatic air conditioning system.