


INJECTOR

ON-VEHICLE INSPECTION

SF00R-09

1. REMOVE THROTTLE BODY COVER
2. REMOVE INTAKE AIR CONNECTOR

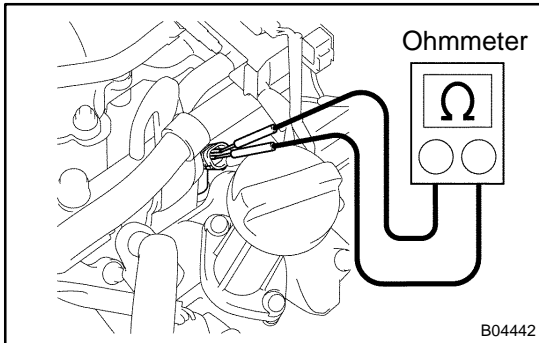

3. INSPECT INJECTOR RESISTANCE

- (a) Disconnect the 8 injector connectors.
- (b) Using an ohmmeter, measure the resistance between the terminals.

Resistance: 13.4 – 14.2 Ω at 20°C (68°F)

If the resistance is not as specified, replace the injector.

- (c) Reconnect the 8 injector connectors.
4. REINSTALL INTAKE AIR CONNECTOR
 5. REINSTALL THROTTLE BODY COVER