




Air Conditioning

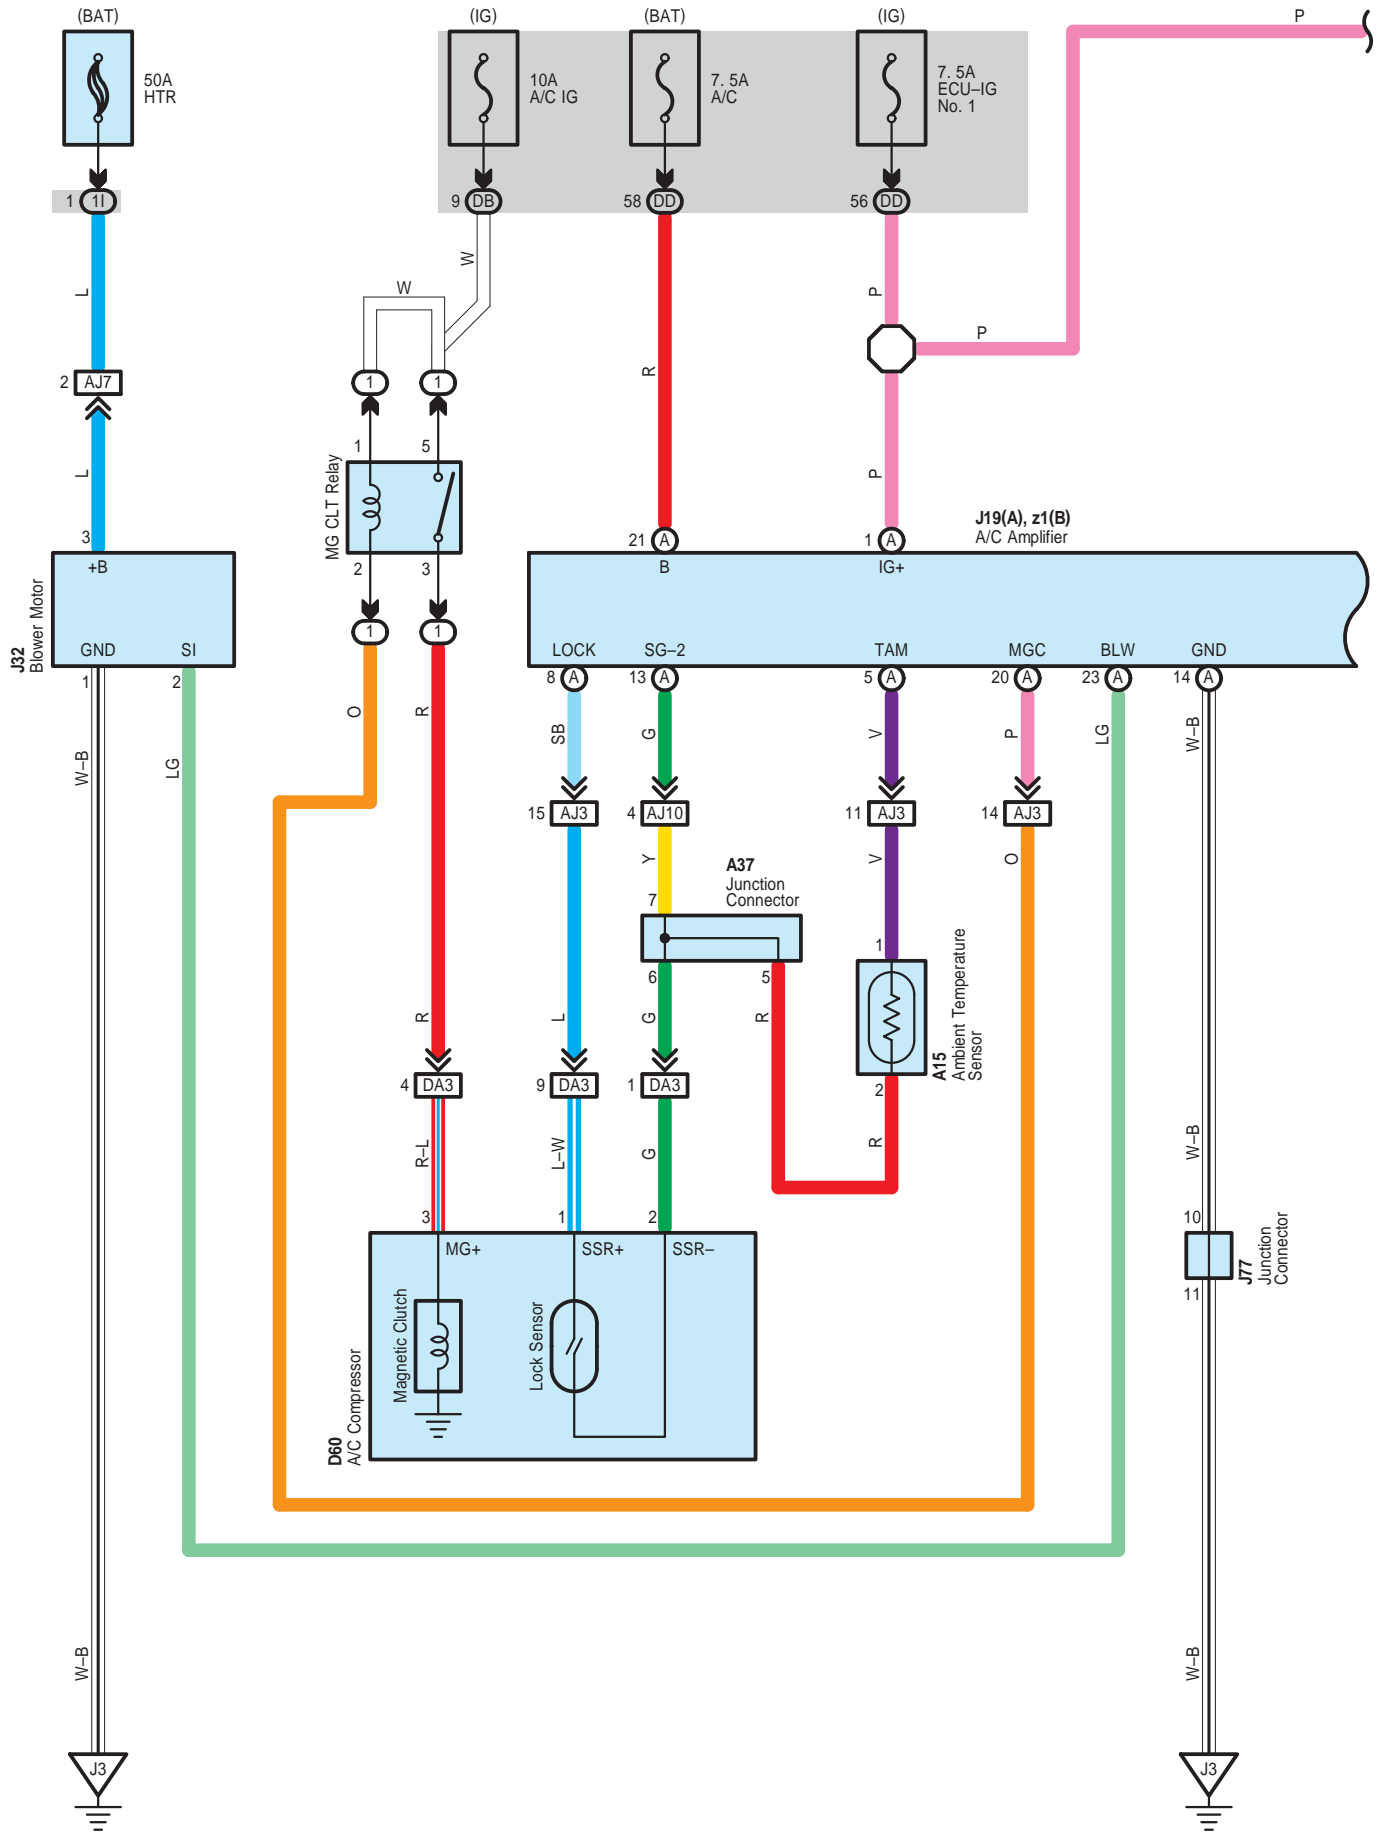


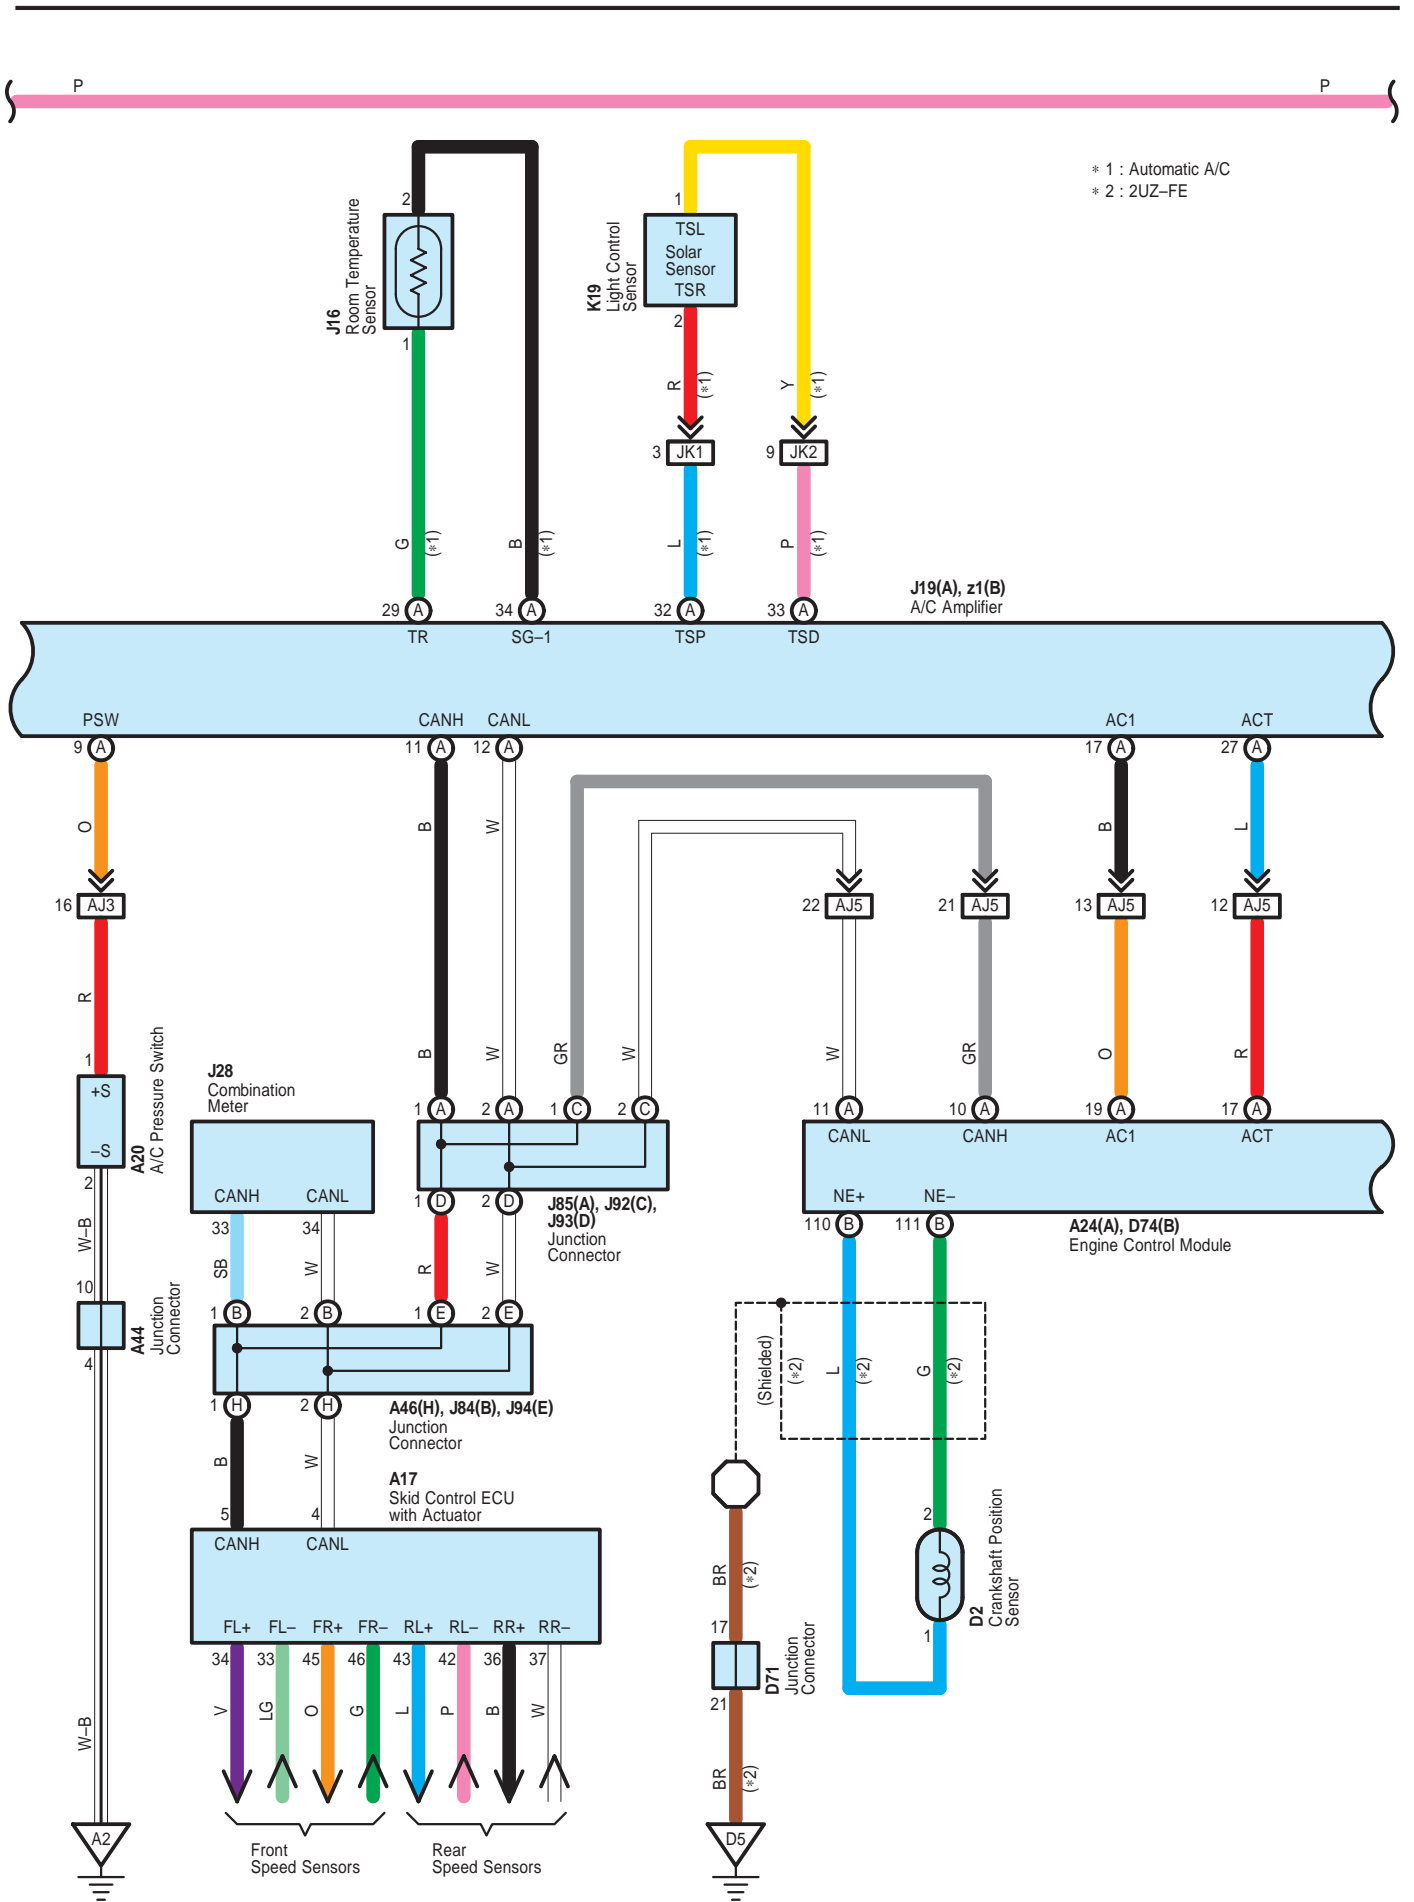

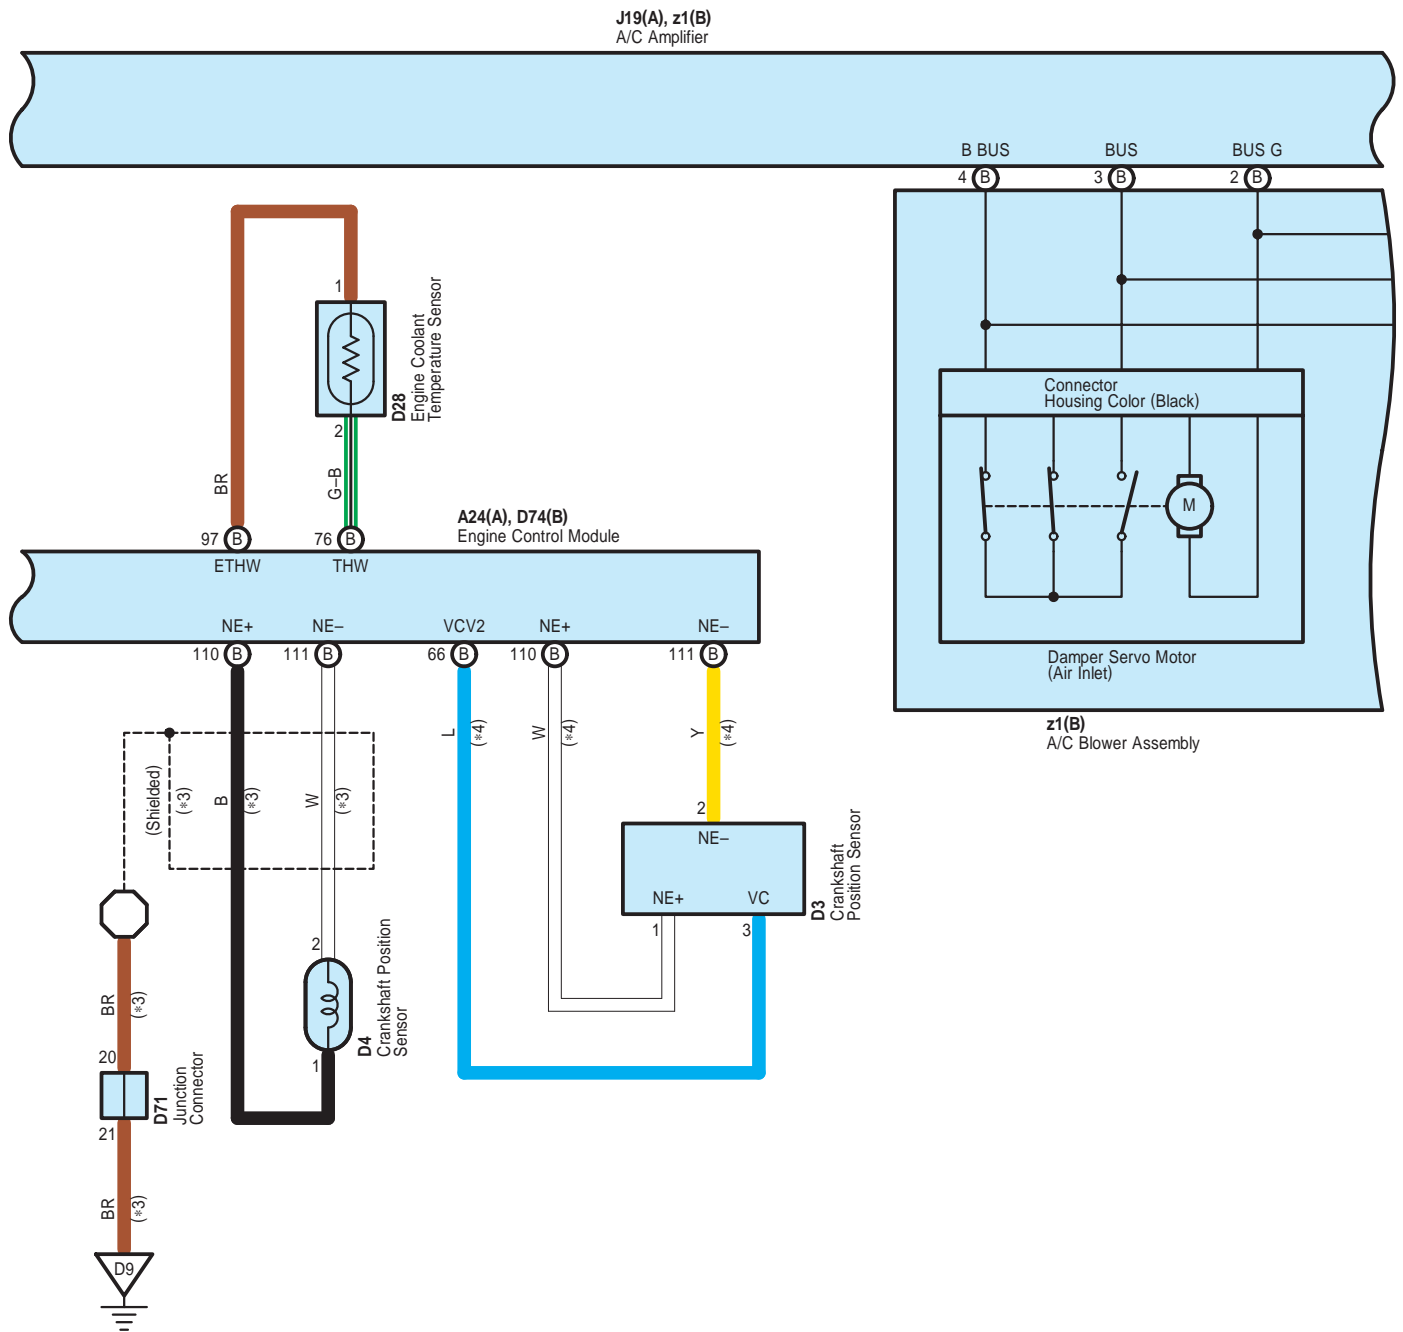

- * 1 : Automatic A/C
- * 3 : 1GR-FE
- * 4 : 3UR-FE


J19(A), z1(B)
A/C Amplifier

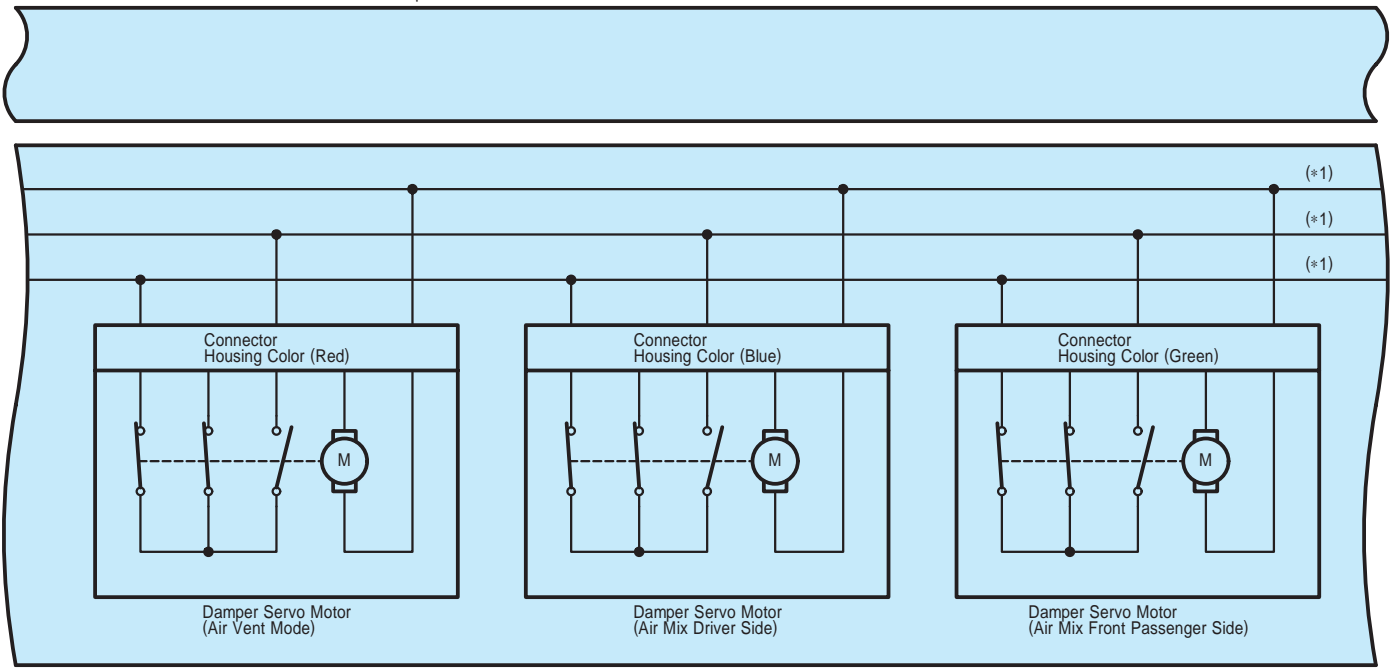

z1(B)
A/C Blower Assembly

Air Conditioning

* 1 : Automatic A/C

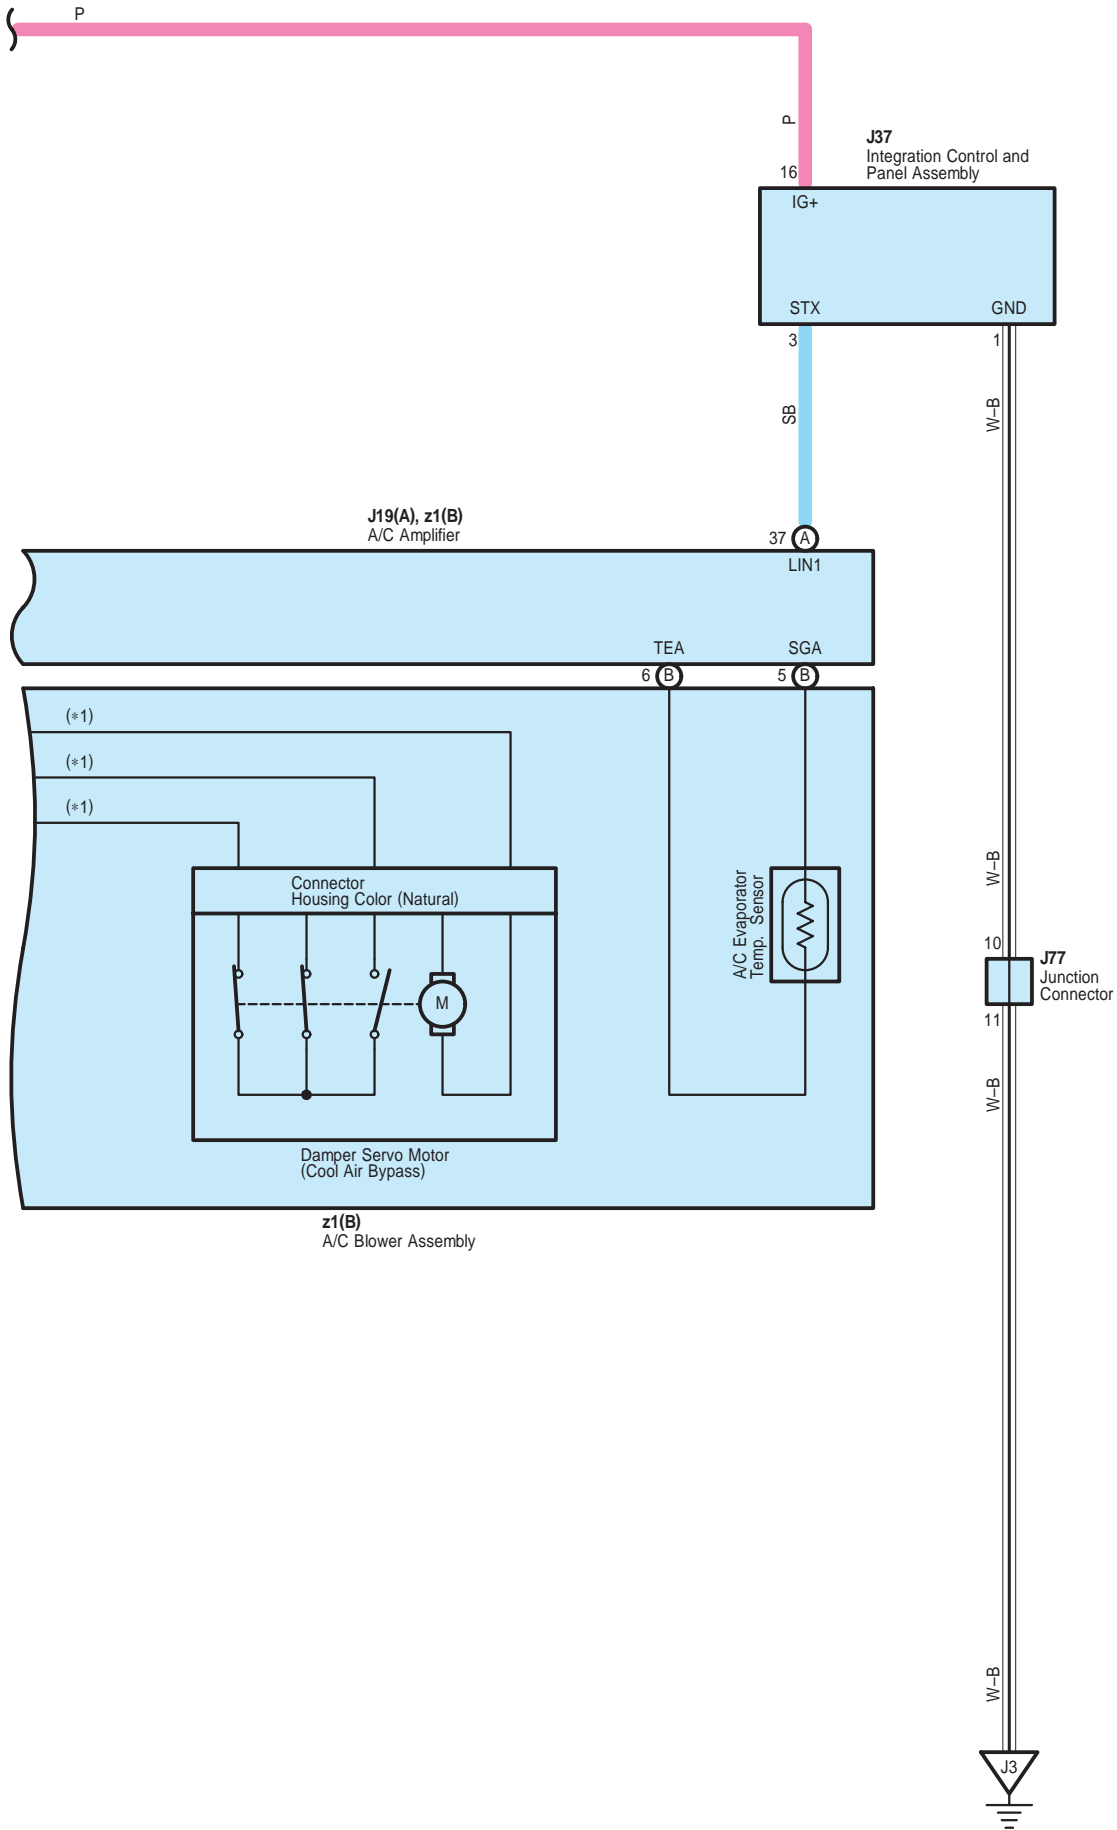

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
A15	52 (3UR-FE)	D2	58 (2UZ-FE)	J32	64 (*1)	
	56 (2UZ-FE)	D3	54 (3UR-FE)		68 (*2)	
	60 (1GR-FE)	D4	62 (1GR-FE)	J37	64 (*1)	
A17	52 (3UR-FE)	D28	54 (3UR-FE)		J77	68 (*2)
	56 (2UZ-FE)		58 (2UZ-FE)	65 (*1)		
	60 (1GR-FE)		62 (1GR-FE)	69 (*2)		
A20	52 (3UR-FE)	D60	55 (3UR-FE)	J84	B	48, 65 (*1)
	56 (2UZ-FE)		59 (2UZ-FE)			48, 69 (*2)
	60 (1GR-FE)		63 (1GR-FE)	J85	A	50, 65 (*1)
A24	A	D71	59 (2UZ-FE)			J92
			63 (1GR-FE)	50, 65 (*1)		
			60 (1GR-FE)	55 (3UR-FE)	J93	D
A37	66 (*1)	D74	B	59 (2UZ-FE)		
				70 (*2)	63 (1GR-FE)	50, 69 (*2)
A44	52 (3UR-FE)	J16	64 (*1)	J94	E	48, 65 (*1)
	56 (2UZ-FE)	J19	A			64 (*1)
	60 (1GR-FE)			68 (*2)	K19	67 (*1)
A46	H	J28	64 (*1)	z1		B
			48, 66 (*1)		68 (*2)	
	48, 70 (*2)					

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1I	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
DB	34	Engine Room Main Wire and Driver Side J/B (Cowl Side Left)
DD	35	Instrument Panel Wire and Driver Side J/B (Cowl Side Left)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)	
AJ3	82 (*1)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)	
	83 (*2)		
AJ5	82 (*1)		
	83 (*2)		
AJ7	82 (*1)		Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
	83 (*2)		
AJ10	82 (*1)		
	83 (*2)		
DA3	78 (3UR-FE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)	
	79 (2UZ-FE)		
	80 (1GR-FE)		
JK1	82 (*1)	Instrument Panel Wire and Instrument Panel No.2 Wire (Right Side of the Instrument Panel)	
	83 (*2)		
JK2	82 (*1)		
	83 (*2)		

* 1 : Floor Shift * 2 : Column Shift * 3 : Double Cab * 4 : Regular Cab * 5 : Separate Seat * 6 : Bench Seat

Air Conditioning



: Ground Points

Code	See Page	Ground Points Location
A2	78 (3UR-FE)	Front Left Fender
	79 (2UZ-FE)	
	80 (1GR-FE)	
D5	79 (2UZ-FE)	Front Side of the Left Cylinder Head
D9	80 (1GR-FE)	Rear Side of the Left Cylinder Head
J3	82 (*1)	Right Kick Panel
	83 (*2)	

* 1 : Floor Shift * 2 : Column Shift * 3 : Double Cab * 4 : Regular Cab * 5 : Separate Seat * 6 : Bench Seat

