


## Charging (Access/Standard Cab)

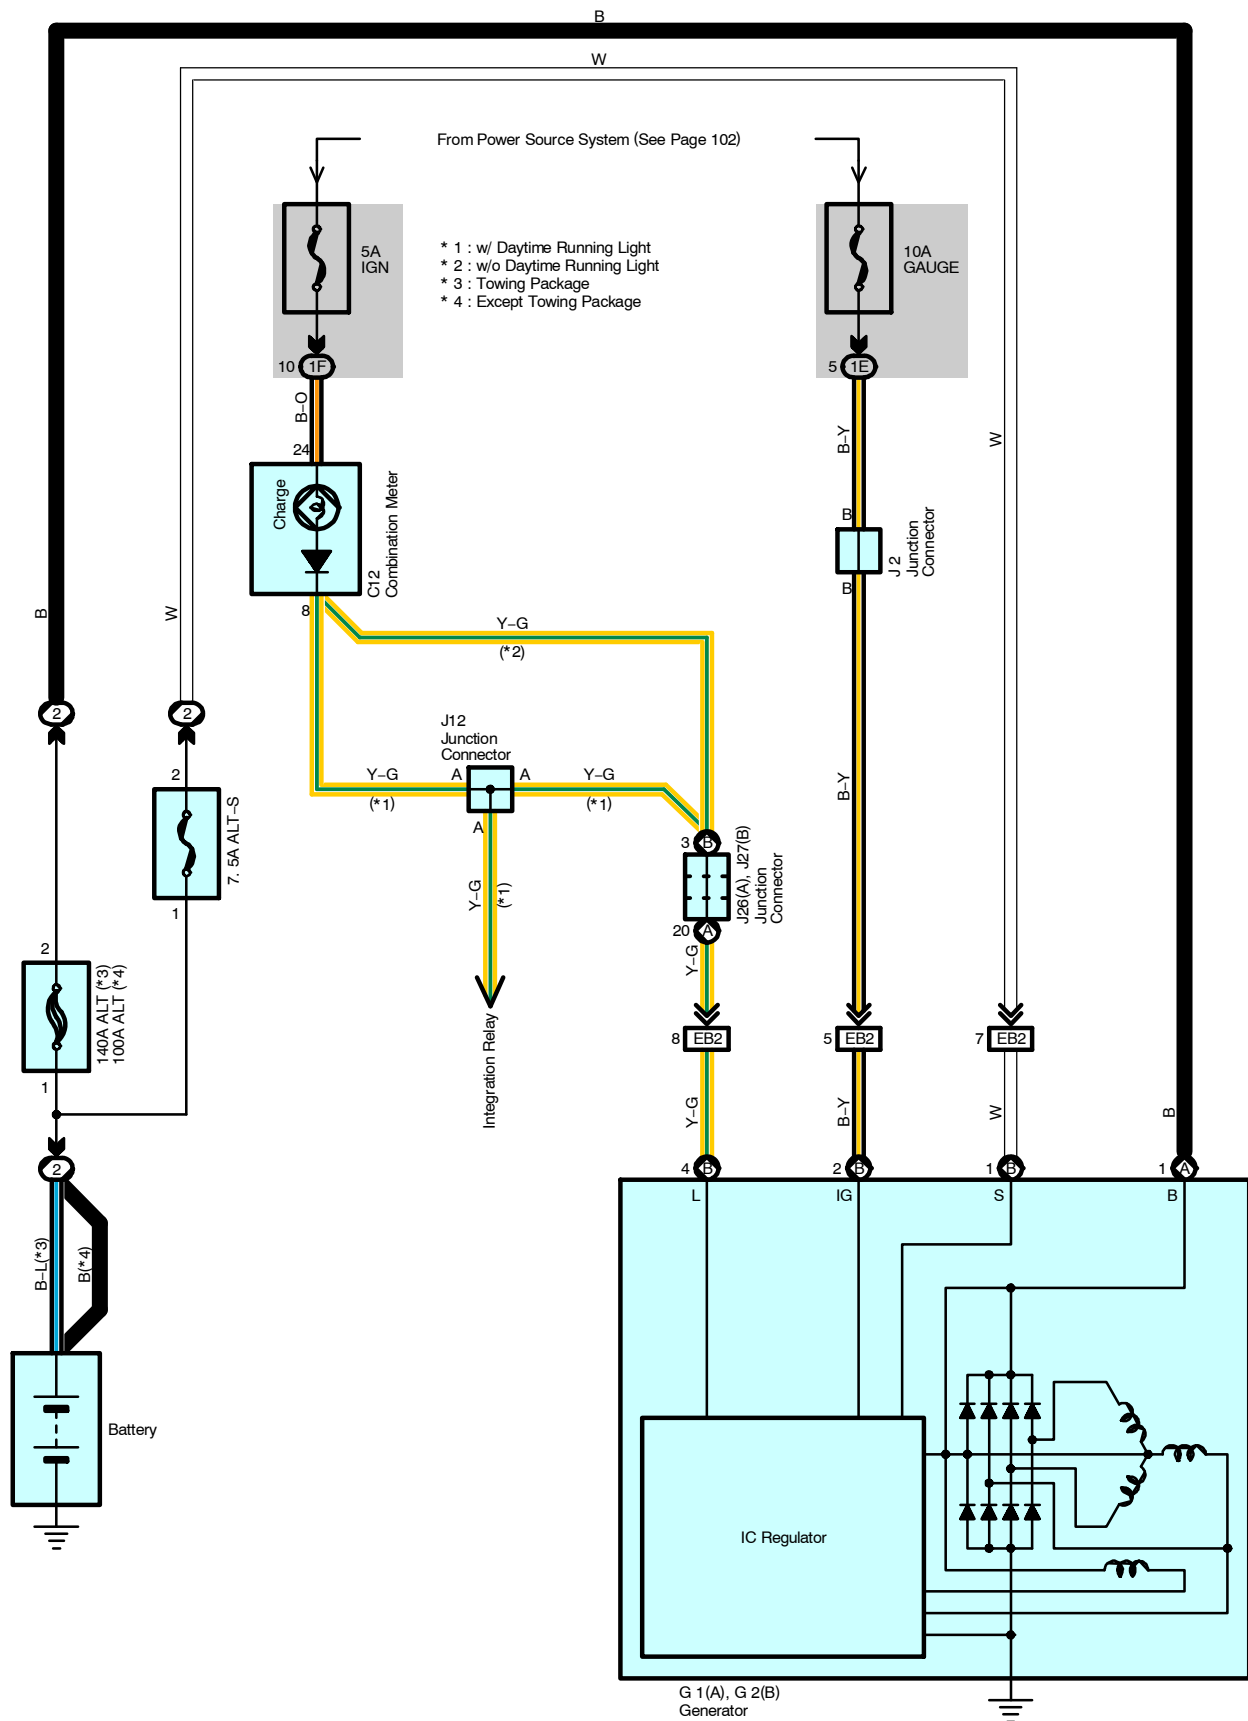

## Service Hints

### G2 (B) Generator

- (B) 1-Ground : 13.9–15.1 volts with engine running at 2000 rpm and 25°C (77°F)  
 13.5–14.3 volts with engine running at 2000 rpm and 115°C (239°F)  
 (B) 4-Ground : 0–4 volts with ignition SW at ON position and engine not running

## ○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
C12		56		G2	B	54 (1GR-FE)		J26	A	58	
G1	A	52 (2UZ-FE)		J2		53 (2UZ-FE)		J27	B	58	
		54 (1GR-FE)				55 (1GR-FE)					
G2	B	52 (2UZ-FE)		J12		58					

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	23	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24 (*2) 28 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24 (*2) 28 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	74 (2UZ-FE) 76 (1GR-FE)	Engine No.2 Wire and Engine Room Main Wire (Under the Engine Room R/B)

\* 1 : w/ Daytime Running Light    \* 2 : w/o Daytime Running Light    \* 3 : Access Cab    \* 4 : Standard Cab    \* 5 : Bench Seat  
 \* 6 : Captain Seat    \* 7 : Access Cab Captain Seat    \* 8 : Standard Cab Bench Seat    \* 9 : Access Cab w/o Power Seat