


CARGO LIGHT

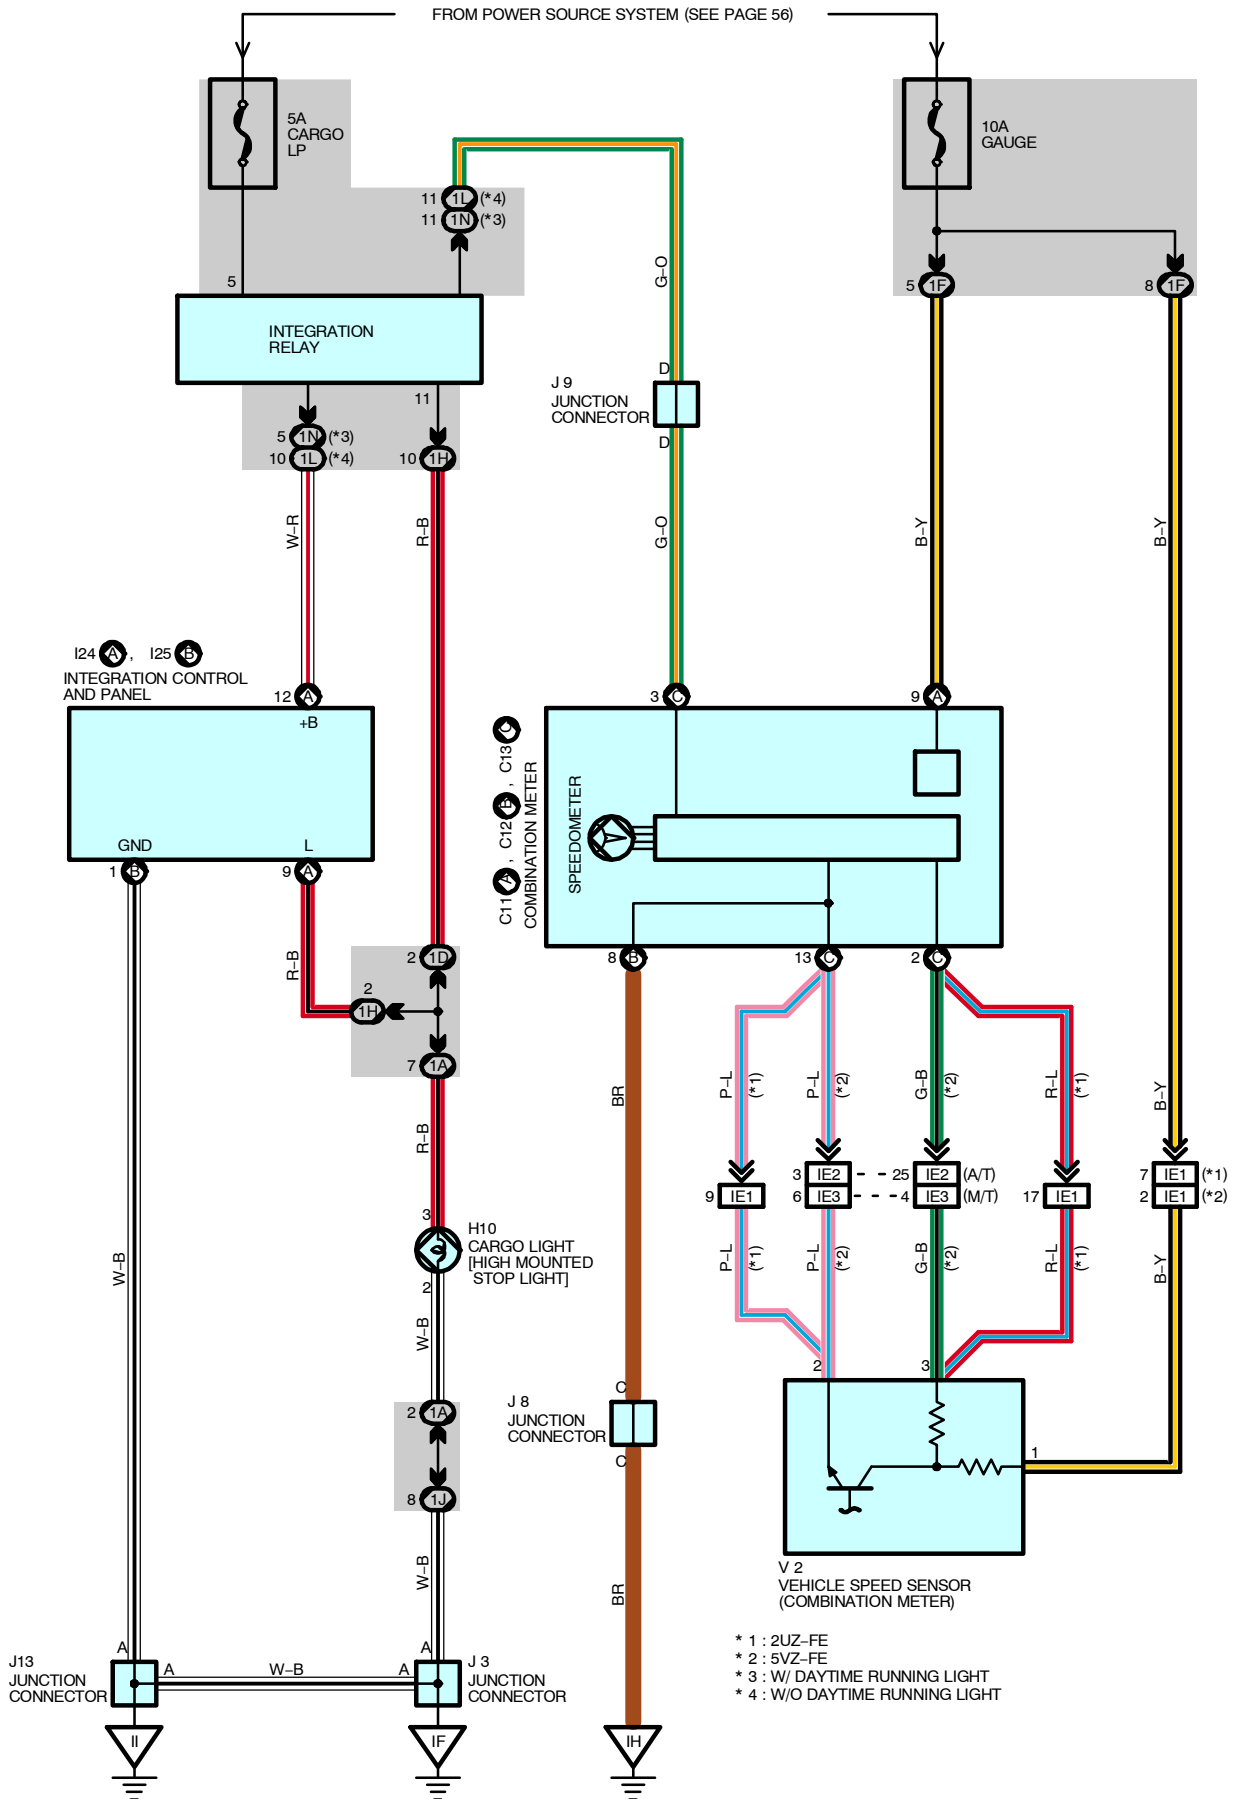

SERVICE HINTS

I24 (A), I25 (B) INTEGRATION CONTROL AND PANEL

(B) 1-GROUND : Always continuity

(A)12-GROUND : Always. approx. 12 volts

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C11	A	34	I24	A	35
C12	B	34	I25	B	35
C13	C	34	J3	35	
H10		36 (Access Cab)	J8	35	
		37 (Standard Cab)	J9	35	
				J13	35
				V2	31 (2UZ-FE)
					33 (5VZ-FE)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	22 (*2) 26 (*1)	Roof Wire and Driver Side J/B (Lower Finish Panel)
1D	22 (*2) 26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1F	22 (*2) 26 (*1)	
1H	22 (*2) 26 (*1)	
1J	22 (*2) 26 (*1)	
1L	23 (*2)	
1N	27 (*1)	

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	46	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IE2		
IE3		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	44	Left Kick Panel
IH	44	Right Kick Panel
II		

* 1 : w/ Daytime Running Light

* 2 : w/o Daytime Running Light

* 3 : Bench Seat

* 4 : Separate Seat, Captain Seat (w/o Power Seat)