


Power Outlet – 115V (Double Cab)

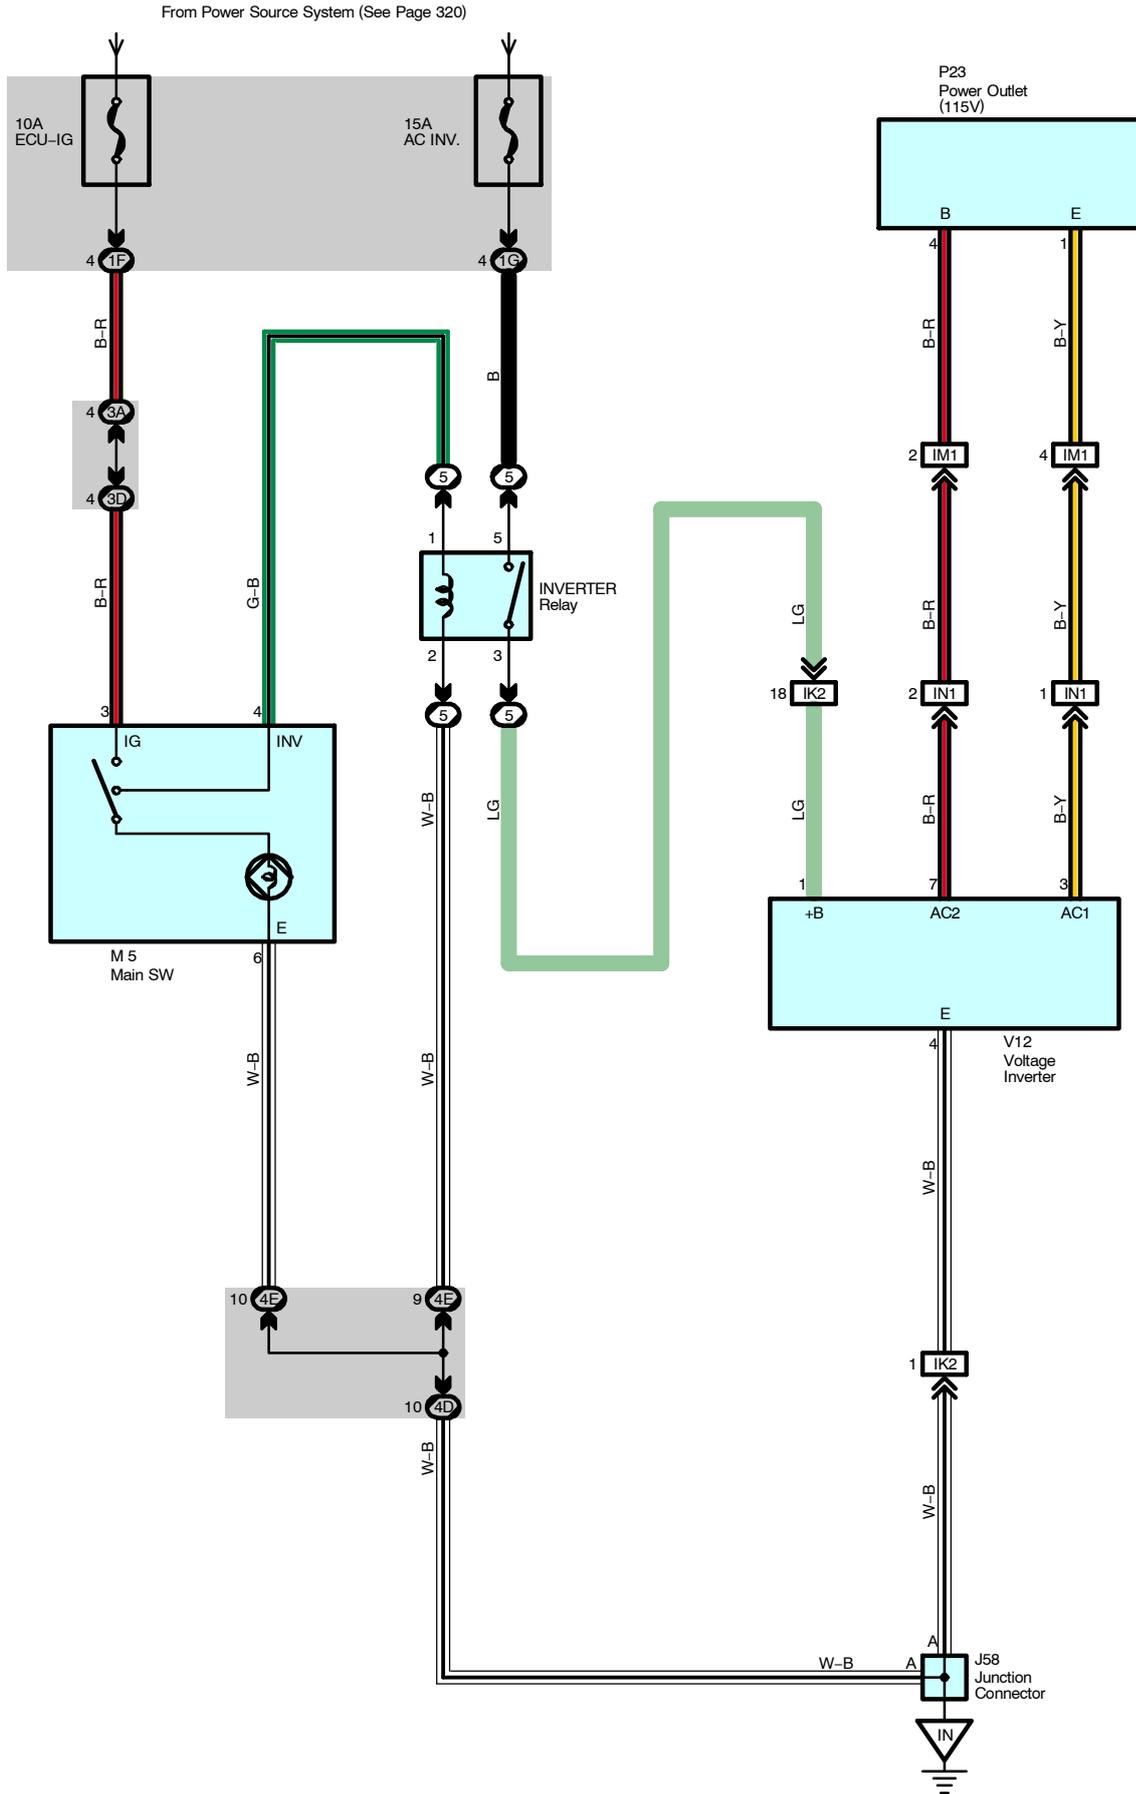

Service Hints**INVERTER Relay**

5-3 : Closed with the ignition SW at ON position and the main SW at on

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
J58	68	P23	69		
M5	69	V12	71		

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
5	39	Driver Side R/B (Under the Instrument Panel J/B)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	45	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G		
3A	48	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3D		
4D	50	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4E		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK2	94	Floor Wire and Cowl Wire (Right Kick Panel)
IM1	92	Console Box Wire and Cowl Wire (Rear Console)
IN1	92	Cowl Wire and Floor Wire (Rear Console)

 : **Ground Points**

Code	See Page	Ground Points Location
IN	92	Right Kick Panel