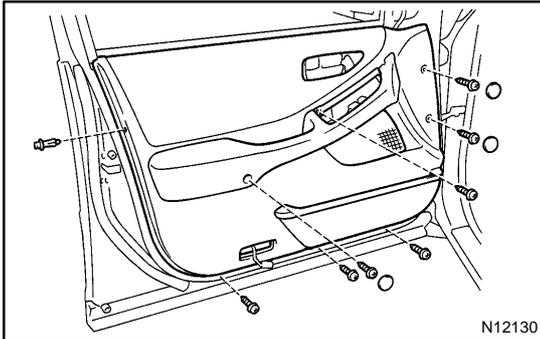


**DISASSEMBLY**

1. REMOVE INSIDE HANDLE BEZEL
2. REMOVE COURTESY LIGHT
3. REMOVE POWER WINDOW SWITCH

**4. REMOVE DOOR TRIM**

- (a) Using a screwdriver, remove the 3 caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 7 screws and clip.

- (c) Insert a screwdriver between the door and door trim to pry the trim out.

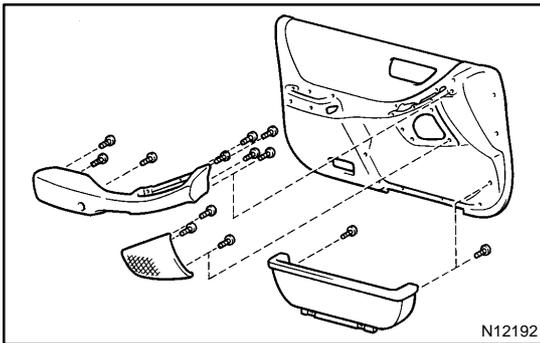
**NOTICE:**

**Be careful not to damage the door and door trim.**

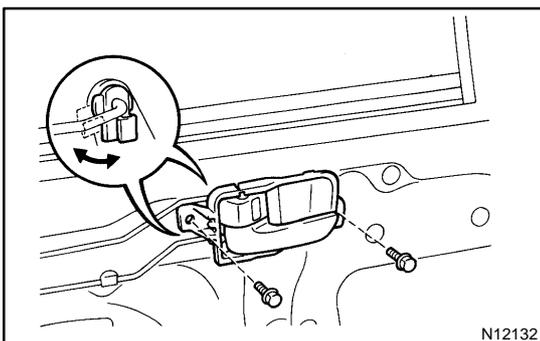
HINT:

Tape the screwdriver tip before use.

- (d) Pull the trim upward to remove it.

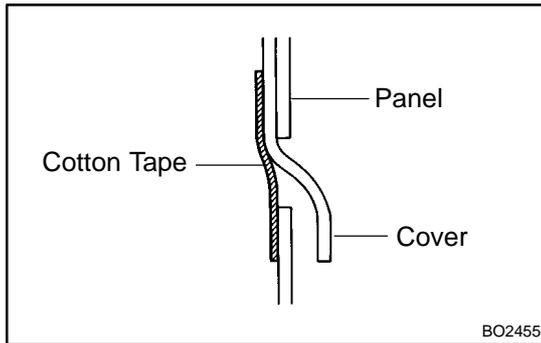


- (e) Remove the 8 screws and armrest from the door trim.
- (f) Remove the 3 screws and speaker cover from the door trim.
- (g) Remove the 2 screws and door pocket from the door trim.

**5. REMOVE REAR VIEW MIRROR COVER****6. REMOVE OUTSIDE REAR VIEW MIRROR****7. REMOVE DOOR SPEAKER BOARD****8. REMOVE FRONT DOOR SERVICE HOLE COVER****9. REMOVE INSIDE HANDLE**

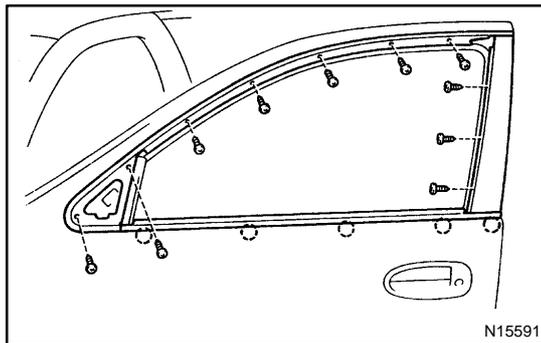
- (a) Remove the 2 bolts.

- (b) Disconnect the 2 control links from the inside handle as shown in the illustration.

**10. REMOVE FRONT DOOR SERVICE HOLE COVER NO.2**

HINT:

At the time of reassembly, please refer to the following item.  
Bring out the links through the service hole cover.

**11. REMOVE DOOR MOULDING**

- (a) Pry out the clips from the front door belt moulding edge and remove the moulding.
- (b) Remove the 3 screws and front door frame moulding.
- (c) Remove the 7 screws and front door upper moulding.

**12. REMOVE FRONT DOOR WEATHERSTRIP****13. REMOVE OUTSIDE LOWER MOULDING****14. REMOVE FRONT DOOR GLASS RUN**

HINT:

Pull the glass run upward.

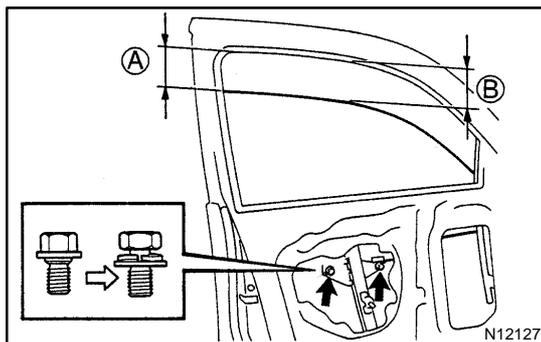
**15. REMOVE DOOR GLASS**

Remove the 2 bolts and glass.

HINT:

At the time of reassembly, please refer to the following items.

- Adjust the glass and tighten the bolts when dimensions A and B, as shown, are equal.
- Substitute the bolt with washer for the centering bolt.

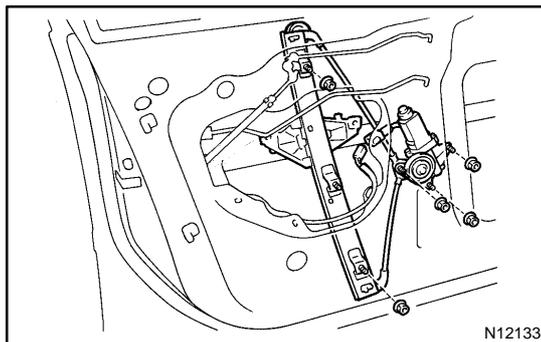
**16. REMOVE WINDOW REGULATOR**

Disconnect the connector, then remove the 5 nuts and window regulator.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

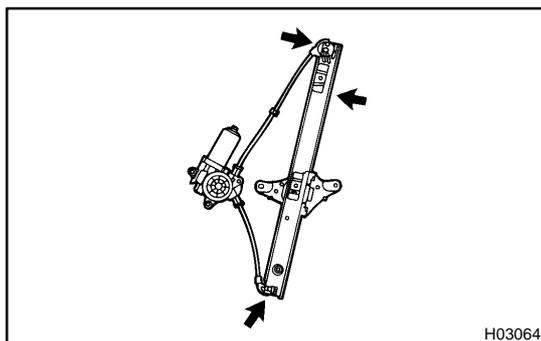
HINT:

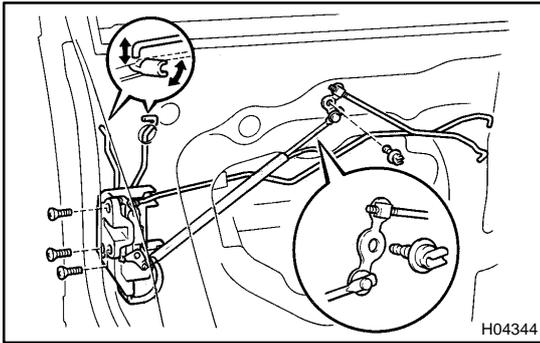
Remove the regulator through the service hole.



HINT:

At the time of reassembly, please refer to the following item.  
Apply MP grease to the glass guide and rollers of window regulator.

**17. REMOVE FRONT LOWER FRAME****18. REMOVE REAR LOWER FRAME**

**19. REMOVE DOOR LOCK**

- (a) Using a clip remover, remove the bellcrank and clamp.
- (b) Disconnect the 2 control links from the door lock, then remove the links.
- (c) Disconnect the 2 links from the outside handle and door lock cylinder.
- (d) Disconnect the connector.
- (e) Remove the 3 torx screws and door lock.

**Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)**

**HINT:**

At the time of reassembly, please refer to the following items.

- Apply adhesive to 3 screws.  
**Part No. 08833-00070, THREE BOND 1324 or equivalent**
- Apply MP grease to the sliding and rotating parts of the door lock.

**20. REMOVE OUTSIDE HANDLE**

- (a) Remove the 2 bolts and outside handle.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**
- (b) Remove the bolt and door lock cylinder from the outside handle.