

## DISASSEMBLY

### 1. 2WD:

#### REMOVE GREASE CAP

- (a) Mount the axle hub in a soft jaw vise.

#### HINT:

Close the vise until it holds hub bolts. Do not tighten further.

- (b) Using a screwdriver, remove the grease cap.

### 2. 4WD:

#### REMOVE OIL SEAL (INSIDE)

- (a) Mount the axle hub in a soft jaw vise.


#### HINT:

Close the vise until it holds hub bolts. Do not tighten further.

- (b) Using a screwdriver, remove the oil seal (inside).

### 3. REMOVE AXLE HUB FROM STEERING KNUCKLE

- (a) Remove the 4 bolts and shift the dust cover towards the hub side (outside).

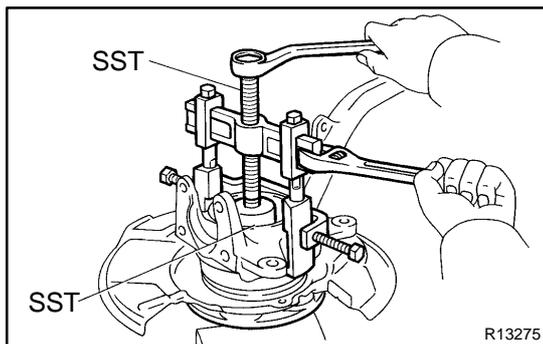

- (b) Using SST, remove the axle hub from the steering knuckle.

SST 09710-30021 (09710-03051),  
09950-4001 1 (09951-04020, 09952-04010,  
09953-04020, 09954-04010, 09955-04031,  
09957-04010, 09958-04011)

- (c) Remove the dust cover from the steering knuckle.

- (d) Remove the bearing spacer and ABS speed sensor rotor (w/ ABS)/spacer (w/o ABS).

#### NOTICE:


Take care not to scratch the serration of the speed sensor rotor.

### 4. REMOVE OIL SEAL (OUTSIDE)

Using a screwdriver, remove the oil seal (outside) from the steering knuckle.

### 5. REMOVE BEARING FROM STEERING KNUCKLE

- (a) Using snap ring pliers, remove the snap ring.

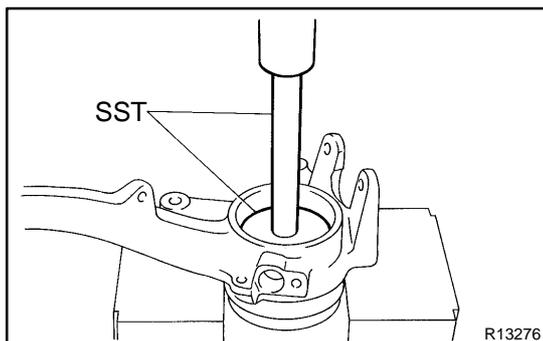

- (b) Using SST and a press, remove the bearing from the steering knuckle.

SST 09950-60020 (09951-00810),  
09950-70010 (09951-07150)